
Robert Abbey, Inc. ASSEMBLY INSTRUCTIONS FOR YOUR OLLO MINI PENDANT

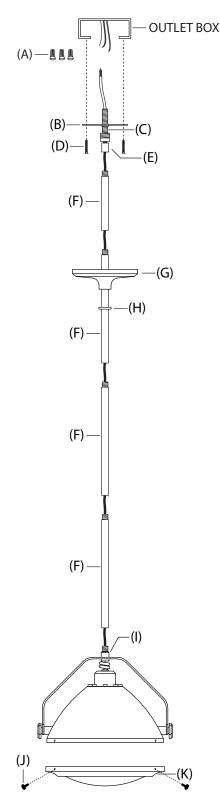

SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is important that they are read completely before beginning installation.

*WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

*Always turn off power at switch before replacing bulbs.

ASSEMBLY INSTRUCTIONS:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT THE FUSE BOX/ CIRCUIT BREAKER.
- 2. Remove all parts carefully from the carton. Do not throw away any parts.
- 3. Measure desired drop for fixture to hang and remove/ reconfigure extensions (F) as needed.
- **TO ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into/out of the threaded opening of the next extension. Make sure electrical cord is pulled tight when threading extensions together to prevent damage to the wiring.**
- 4. Pull cord taut from above and thread bottom extension (F) onto the nipple exiting housing (I). Make sure hang straight (E) is threaded onto top extension (F).
- 5. Lower collar (H) and canopy (G) down over extensions (F) and let them rest on housing (I).
- 6. Attach cross bar (B) to the fixture by threading nipple (C) into the top of hang straight (E). Cut the cord to the desired length to make electrical connections. At least 8" of wire will be needed to make proper electrical connections.
- 7. Lift the fixture to the ceiling and attach cross bar (B) to the outlet box using mounting screws (D).
- 8. Make proper electricial connections described in steps 9 11.
- 9. Attach ground wire from the fixture (green or copper in color) to the ground wire in outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
- 10. Attach hot wire from fixture (black in color, or smooth side of wire) to hot wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
- 11. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
- 12. Carefully push wire connections back into ceiling outlet box. Slide canopy (G) up extensions (F) and hold firmly against ceiling. Slide collar (H) up extensions (F) and thread onto hang straight (E) to secure canopy (G) against the ceiling.
- 13. Remove shade cover (K) by un-threading screws (J). Insert one 60W Max Type A, medium base bulb into the socket.
- 14. Re-attach shade cover (K) using screws (J).
- 15. Reconnect main electrical supply at fuse box/ circuit breaker and test the fixture.
- ** To clean, wipe with a soft cloth only. Do not use chemical or abrasive cleaners as they can damage the finish of the lamp. **